

edu-matic
PLAY AND LEARN

3+



Slides with Maths & Letter Practice



6 Different Colours



Colourful Lighting Effects

by volkano®

INSTRUCTION MANUAL

Please read these instructions carefully and retain for future reference.



V1
EDU-1026

HIGHLIGHTS

- Light-Up Drawing Pad that Illuminates the Drawing
- Great for Spelling, Math & Reading and so much more
- 8 Different Screen Colours
- Ideal for Home and Travel
- Reusable

PACKAGE CONTENTS

- 1 x Drawing Pad
- 6 x Neon Pens
- 30 x Stencils
- 1 x Black Glow Boost Card
- 1 x Wipe Cloth
- 1 x Instruction Manual

SPECIFICATIONS

- Material: Non-toxic, BPA Free Materials
- Batteries: 2 x AA 1.5 V Batteries (Not Included)
- Dimensions: 190 mm (W) x 254 mm (L)

INSTRUCTIONS FOR USE

INSTALLING OR REPLACING THE BATTERIES:

- Use a Philips screwdriver (not included) to loosen and remove the screw and the battery compartment cover located on the rear of the drawing pad.
- Insert 2 AA batteries, make sure the polarity of the batteries corresponds with the polarity indicated on the drawing pad.
- Replace the cover and tighten the screw.

Note: Do not mix alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.


USING THE DRAWING PAD:

- Turn the drawing pad on by pressing the activation button located on the bottom of the pad.
- Each time the activation button is pressed, you will get a different glow effect.
- When you are done using drawing pad, switch it off by pressing the activation button.

USING THE STENCIL SHEETS:

- Select a stencil from three different types of templates: You can learn, play games, or draw.
- Place the selected stencil sheet behind the clear panel insert with the design side facing outwards.
- Place your drawing pad flat on a hard surface.
- Trace over the lines of the stencil with your neon pens.
- Remove the stencil and turn the drawing pad on.

Note: It is recommended not to draw or write on the drawing pad if the rear stands are extended.

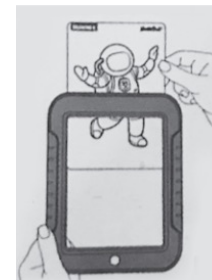

BEST GLOW EFFECTS:

- Darken the room and use multiple colors on the drawing board.
- Slide the black glow boost card behind your design to give your art a brighter glow.



USING THE WIPE CLOTH:

- The wipe cloth can be used damp or dry, it is recommended to slightly dampen the cloth for best results. After cleaning allow the drawing pad to dry completely before using it again.
- To use the wipe cloth, bunch the wipe cloth up and wipe the screen to erase the art.
- To clean the wipe cloth, wash it by hand with soap and warm water, lay the cloth flat to dry.

SAFETY PRECAUTIONS

In order to reduce the risk of harm, please read these instructions and precautions carefully before using this product:

- Children under 3 years of age should not use this product.
- Do not use any other pens other than those supplied.
- Keep away from the child's mouth and eyes.
- This product should be placed out of reach from infants and pets.
- After playing with the pens, wash the child's hands thoroughly.
- Small parts are a choking hazard and not suitable for children younger than 3 years of age.
- Do not submerge the drawing pad in water.
- **Stain Warning:** The neon pens contain colourants that may permanently stain clothing, wallpaper, walls, wood, carpeting and other non-washable materials and surfaces.
- Batteries must be installed by an adult.

WARNING: Not suitable for children under the age of 3.

ENVIRONMENTALLY FRIENDLY DISPOSAL

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.

- At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.
- Never dispose of used electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used electronics in accordance with the prevailing community regulations that apply to the disposal of electronics. If there are no local regulations concerning electronics disposal, please dispose of the device in a waste bin for electronic devices.



DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

WARRANTY

This Edumatic Drawing Pad comes with a standard 12-month limited warranty against manufacturing defects and faults. Should your product be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.

This warranty commences from the date of purchase.

Kindly retain your proof of purchase as well as the packaging for your warranty period.

Note:

The warranty does not apply to a product that:

- a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
- b.) Has been misused or neglected.
- c.) Has been damaged accidentally or by Force Majeure including fire and flooding.
- d.) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance to this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

Should you require any further assistance or have any questions on your warranty, please contact the store of purchase.